CLICKDECK®

CLICKDECK SURFACE INSTALLATION GUIDE

This guide provides a step-by-step overview of how to install surface materials onto the Clickdeck aluminium framing system, including composite decking, timber decking, and pavers. Follow the diagrams and instructions to complete your deck safely, accurately, and with confidence.

Timber Decking

CONTACT / GET A QUOTE

1300 921 043
info@exolux.com.au
clickdeck.com.au

DECK BUILDER - EasyPlan™

design.clickdeck.com.au

CLICKDECK ONLINE STORE

clickdeck.com.au/clickdeck-shop

PRODUCT BY
EXOLUX
DECKING PRODUCTS

AVAILABLE AUSTRALIA WIDE

Tools Required

Tape Measure

Spirit Level

Drill

Circular Saw

OR

Drop Saw

Saw Blade for Wood Cutting

Safety Equipment

Safety Glasses

Gloves

Ear Protection

Screws

Screws
AnchorMark
S2-TTA Decking Screw

OR

Screws
Zenith Easy-Fix Decking Screw

1. Installing the Picture Frame Board (If Required)

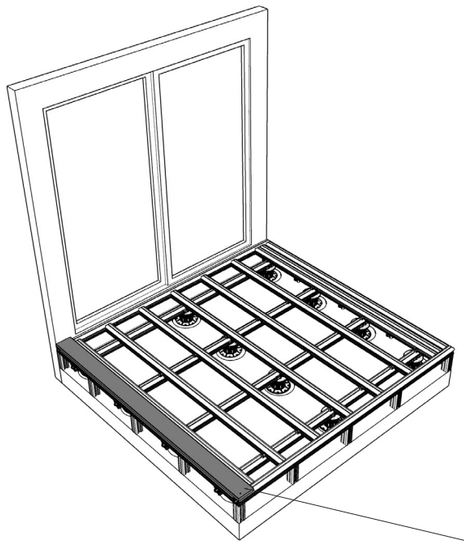

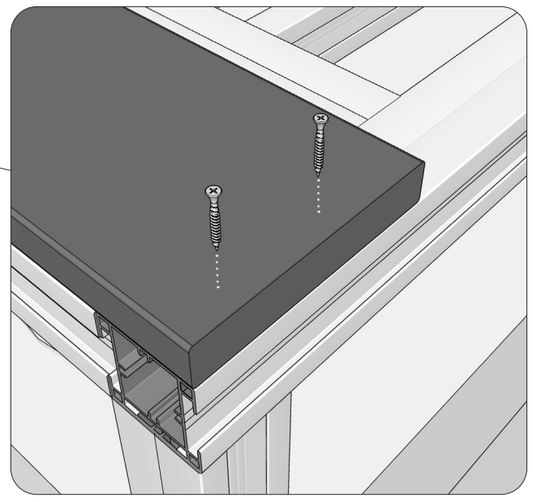

1. To install the picture frame board with timber decking boards, place the board in position and screw through the timber board into the aluminium frame.

2. Installing the Deck Board

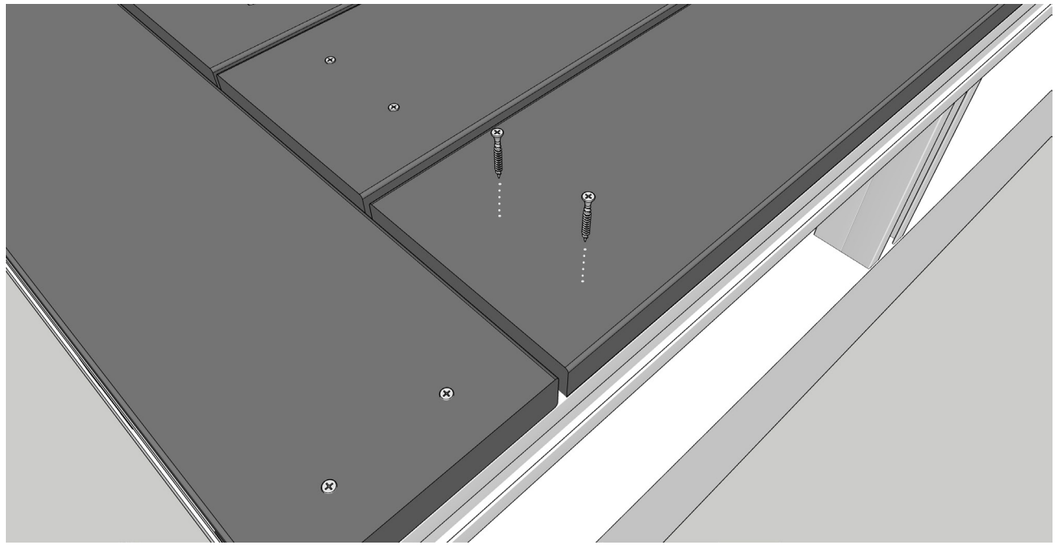

1. Place the board in position, leave a gap between the boards, and screw through the timber board into the aluminium frame.

For any questions, please refer to the Clickdeck Design Guide or scan the QR code to access our Specifications & Technical Documents.

You can also contact us at:
info@exolux.com.au

Specifications & Technical Documents
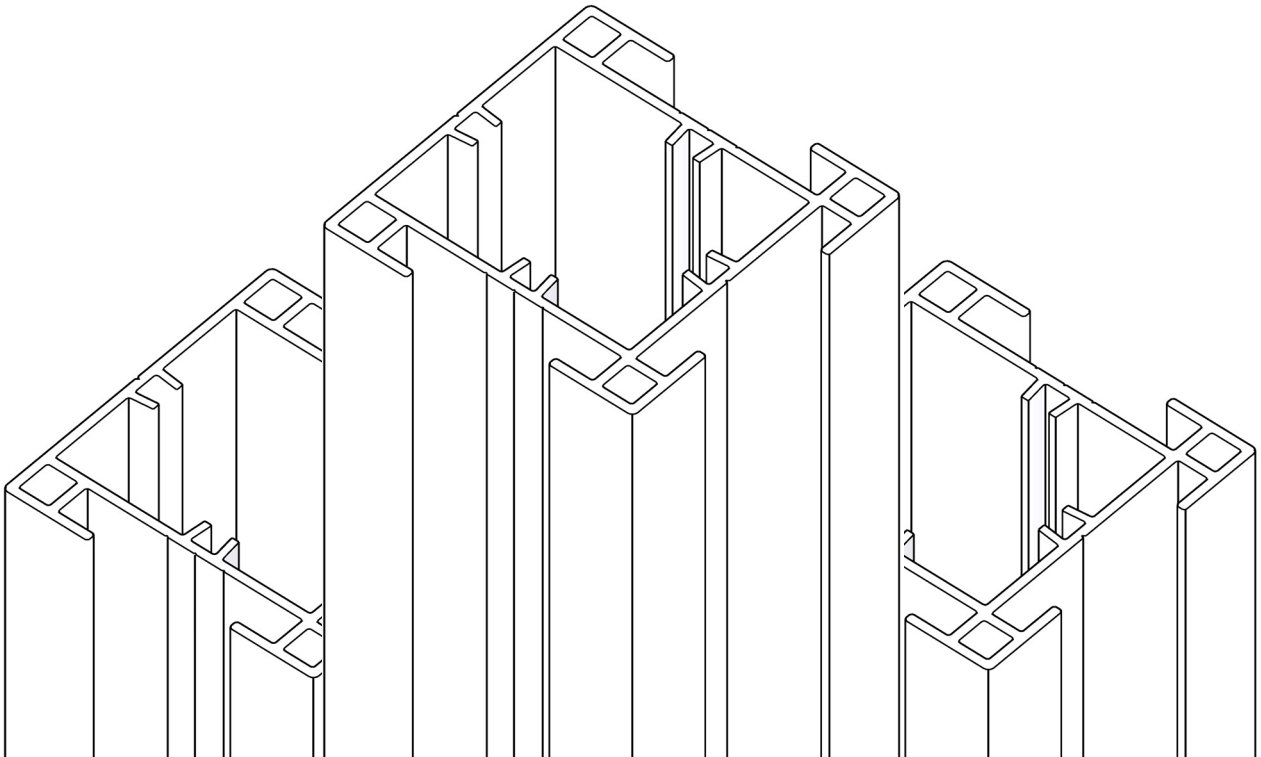
CLICKDECK®